





# Couplings

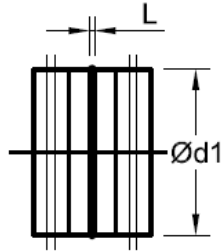

42

## Description

- NPU- used for joining spiral duct
- MF- used for joining fittings

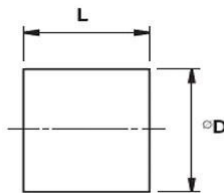

## Ordering Example

Lindab Safe (gasketed):    Type   Ød1  
    NPU    aa

Lindab (nongasketed):    Type   Ød1  
    NP      aa

Lindab (nongasketed):    Type   Ød1  
    MF      aa

# NPU/MF

Ød1 (in)	NPU L (in)	MF L (in)
3	3/8	3 <sup>5</sup> / <sub>8</sub>
4	3/8	3 <sup>5</sup> / <sub>8</sub>
5	3/8	3 <sup>5</sup> / <sub>8</sub>
6	3/8	3 <sup>5</sup> / <sub>8</sub>
7	3/8	3 <sup>5</sup> / <sub>8</sub>
8	3/8	3 <sup>5</sup> / <sub>8</sub>
9	3/8	3 <sup>5</sup> / <sub>8</sub>
10	3/8	5 <sup>1</sup> / <sub>8</sub>
12	3/8	5 <sup>1</sup> / <sub>8</sub>
14	3/8	5 <sup>1</sup> / <sub>8</sub>
16	3/8	6 <sup>5</sup> / <sub>8</sub>
18	3/8	6 <sup>5</sup> / <sub>8</sub>
20	3/8	6 <sup>5</sup> / <sub>8</sub>
22	1/2	6 <sup>5</sup> / <sub>8</sub>
24	1/2	6 <sup>5</sup> / <sub>8</sub>
26	1/2	6 <sup>5</sup> / <sub>8</sub>
28	5/8	8 <sup>5</sup> / <sub>8</sub>
30	5/8	8 <sup>5</sup> / <sub>8</sub>
32	5/8	8 <sup>5</sup> / <sub>8</sub>
34	5/8	8 <sup>5</sup> / <sub>8</sub>
36	5/8	8 <sup>5</sup> / <sub>8</sub>
38	5/8	8 <sup>5</sup> / <sub>8</sub>
40	5/8	10 <sup>1</sup> / <sub>8</sub>
42	5/8	10 <sup>1</sup> / <sub>8</sub>
44	5/8	10 <sup>1</sup> / <sub>8</sub>
46	5/8	10 <sup>1</sup> / <sub>8</sub>
48	5/8	10 <sup>1</sup> / <sub>8</sub>
50	5/8	10 <sup>1</sup> / <sub>8</sub>
52	5/8	10 <sup>1</sup> / <sub>8</sub>
54	5/8	10 <sup>1</sup> / <sub>8</sub>
56	5/8	10 <sup>1</sup> / <sub>8</sub>
58	5/8	10 <sup>1</sup> / <sub>8</sub>
60	5/8	10 <sup>1</sup> / <sub>8</sub>